


Accessing Inspextor Web Interface

The Inspextor Appliance Operates on Linux based Architecture using a DHCP assigned address on startup granting the user/Installer a very intuitive start up procedure. When the network is up and operational, we can begin by accessing the appliance using our web browser.

The Inspextor software for initial installation is configured for best display on a windows or mac. It is advised that initially accessing the system is done by utilizing a PC or Mac Product. The server is first powered up it will begin all processes without the need for manual intervention on the device. However, you will need to source the IP Address from the Networking team for initial access. The figure below will help you with the source address you will enter in your web browsers address bar.

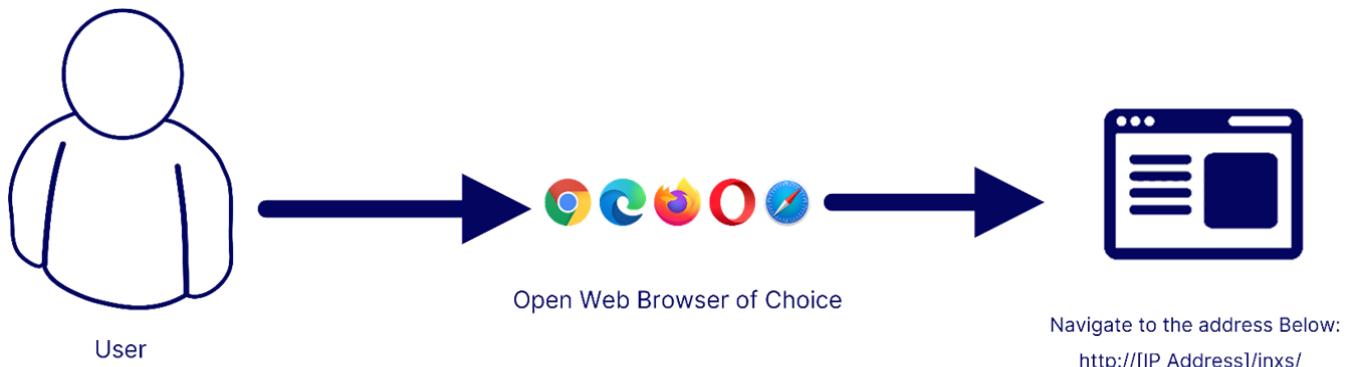


Default User and Initial Log in

When accessing the Inspextor software utilizing the provided user you will be greeted with the Main page as pictured below if this is a new setup up please utilize the credentials default credentials below

Default Credentials

Username	admin
Password	mht-poe

These Credentials should be disabled after initial installation

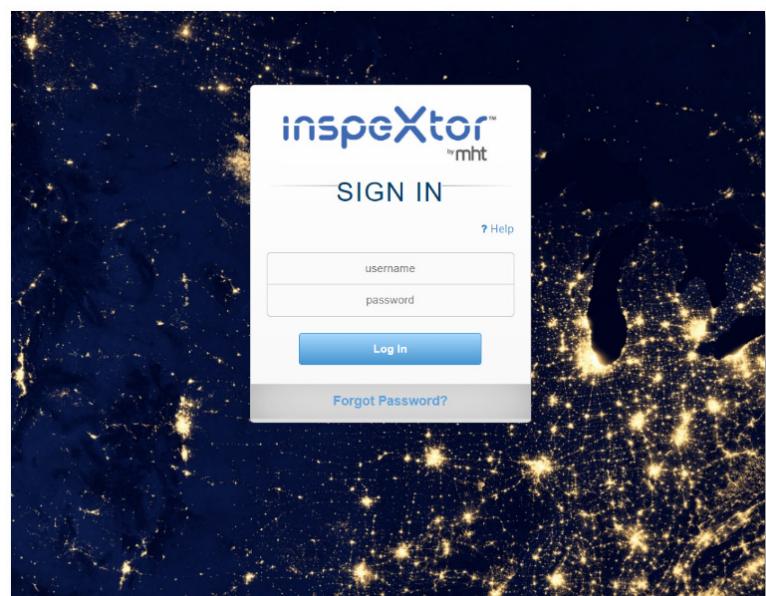

Main Page > Login